




RZR GRILL INSERTS

TOOLS NEEDED: Phillips Screw Driver
Drill
Size 13/64 drill bit
Dremel tool or similar cutter
Marker

PARTS INCLUDED: Stainless Insert
U Nut Clips
Stainless Screws

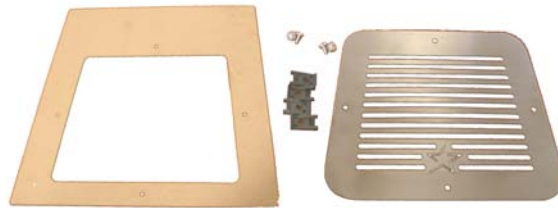


The first step to installing your new Insert is to take the template and lay it down on the location the grill will be installed. The outside of the template will closely follow the panel, so you can line it up perfectly. Clamp the template on to the panel, so you can trace out the inner outline, and mark the holes you need to drill.

Remove the template and drill into the corners of the outline (inside the marks) so you can cut straight lines into the corners. Cut out the shape, and drill the holes into the 4 screw locations using the 13/64 drill bit. You don't have to be super accurate on cutting out the profile, because the edges will be hidden behind the new insert.

On the front grill location, you can peel the logo stickers off once you cut out the shape. Use WD-40 or Goo Gone to remove the sticker residue.

Now that the hole is cut, trim off the shavings on the front and back of the panel using a knife.

Then install the clips as shown below.

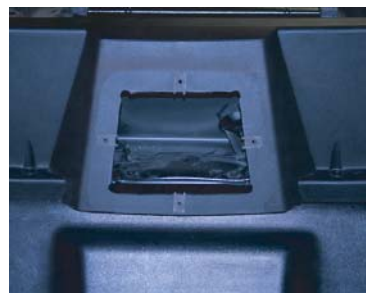

Now attach the grill using the supplied screws.

Congratulations, you are finished!

CLEANING/ MAINTAINING:

Use soap and water to clean. If grill becomes scratched or dull, you can rub the inserts with a Scotchbrite pad in the direction of the slots to clean up or brighten the finish. They are made from a brushed stainless steel. We recommend removing the inserts if you are going to use a Scotchbrite pad to clean them, as it will scratch the surface of your plastics.