



TERYX


ALUMINUM BED DELETE KIT INSTALLATION INSTRUCTIONS

PARTS INCLUDED:

- 1 - BASE PLATE WITH SUPPORT TUBES
- 1 - TAIL GATE
- 1- LEFT SIDE TAIL LIGHT MOUNT
- 1- RIGHT SIDE TAIL LIGHT MOUNT
- 1- LEFT SIDE
- 1- RIGHT SIDE
- 2 - REAR HINGE MOUNTS
- 4- 6MM FLANGE BOLTS
- 65- 1/8" RIVETS
- 5- FULL BORE ADAPTERS
- 5- CLIP ON NUT
- 5- STAINLESS SCREWS

TOOLS NEEDED:

- 10MM SOCKET AND RATCHET
- RIVET GUN
- 1/8" DRILL BIT
- DRILL
- VARIOUS TOOLS FOR BED REMOVAL

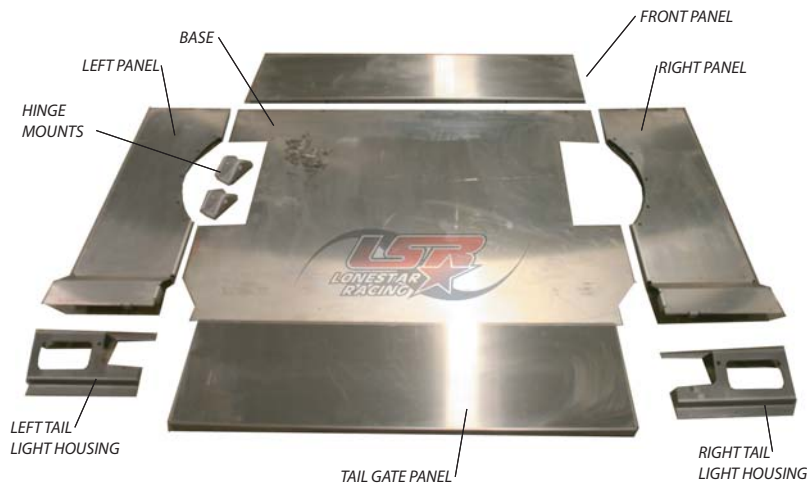

INSTALLATION

The first step for installation is to remove your stock bed. Pay close attention as to how it mounts to the frame, because the new bed mounts exactly the same way.

The next step is to rivet the new bed together using the supplied rivets. It goes together very similar to the factory bed, so you can use it to see how it fits together.

The left and right panels, along with the tail light housing, and tail gate panel share 3 common rivets on each side, so make sure to install those together as shown in Fig. 1.

Once you have the bed assembled, flip it over, and attach the Rear Hinge Mounts using the supplied flange bolts.

Next, remove the front mounting brackets from the stock bed by removing the rubber spacers. Then install them onto the new bed the same way. You can use a small dab of super glue to hold the spacers in place to ease installation.

Transfer over the wheel wells and front dust guards using the factory hardware to the new bed, as well as the tail light mounting brackets and tail lights.

Now you can mount the new bed to the frame the exact same way you removed it.

Last, transfer over the plastics, and your all set to go feel the extra power your Teryx now has.



Fig. 1

Full Bore Body Owners: We have supplied 5 brackets and screws to mount the tail gate cover to the bed. You will have to drill holes into the new bed and rivet on the brackets.

*****WARNING: THIS BED DELETE KIT IS NOT MEANT TO HAUL ITEMS, MOUNT REAR SEATS AND ROLL CAGES TO. IT IS LIGHT WEIGHT, AND NOT DESIGNED TO CARRY THINGS. IT IS STRICTLY TO ADD MORE PERFORMANCE TO YOUR TERYX WITH A NICE CLEAN FACTORY LOOK.*****

CLEANING/ MAINTAINING:

Use soap and water to clean.



TERYX ALUMINUM BED DELETE KIT INSTALLATION INSTRUCTIONS



STOCK FRONT MOUNT BRACKET

RUBBER SPACER

****Please Note****


If your bed came with the dump option, you will need to purchase the following parts from a Kawasaki Dealer:

11055A qty 2

92161A qty 2

11055 qty 2

130A qty 4

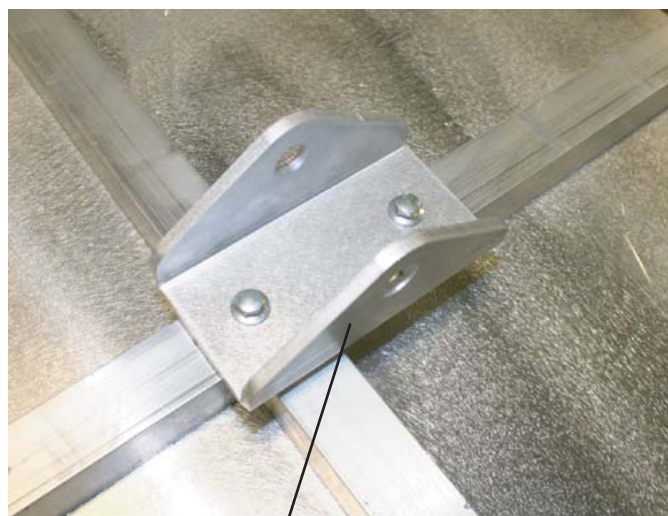

REAR HINGE MOUNT

USE FACTORY PIN AND CLIPS TO MOUNT TO FRAME

